



Central headquarters:
ul. Biata Droga 31, 34-122 Wieprz
Service:
ul. Skotnica 120, 32-652 Bulowice
phone: +48 33 875 93 80
e-mail: serwis@techsterowniki.pl

EN

TECH
CONTROLLERS
USER'S MANUAL
EU-R-8p



WARRANTY CARD

TECH STEROWNIKI II Sp. z o.o. company ensures to the Buyer proper operation of the device for the period of 24 months from the date of sale. The Guarantor undertakes to repair the device free of charge if the defects occurred through the manufacturer's fault. The device should be delivered to its manufacturer. Principles of conduct in the case of a complaint are determined by the Act on specific terms and conditions of consumer sale and amendments of the Civil Code (Journal of Laws of 5 September 2002).

CAUTION! THE TEMPERATURE SENSOR CANNOT BE IMMersed IN ANY LIQUID (OIL ETC). THIS MAY RESULT IN DAMAGING THE CONTROLLER AND LOSS OF WARRANTY! THE ACCEPTABLE RELATIVE HUMIDITY OF THE CONTROLLER'S ENVIRONMENT IS 5÷85% REL.H. WITHOUT THE STEAM CONDENSATION EFFECT.

THE DEVICE IS NOT INTENDED TO BE OPERATED BY CHILDREN.

Activities related to setting and regulation of the controller parameters described in the Instruction Manual and parts wearing out during normal operation, such as fuses, are not covered by warranty repairs. The warranty does not cover damages arising as a result of improper operation or through the user's fault, mechanical damage or damage created as a result of fire, flood, atmospheric discharges, overvoltage or short-circuit. The interference of an unauthorized service, wilful repairs, modifications and construction changes cause the loss of Warranty. TECH controllers have protective seals. Removing a seal results in the loss of Warranty.

The costs of unjustifiable service call to a defect will be borne exclusively by the buyer. The unjustifiable service call is defined as a call to remove damages not resulting from the Guarantor's fault as well as a call considered unjustifiable by the service after diagnosing the device (e.g. damage of the equipment through the fault of the client or not subject to Warranty), or if the device defect occurred for reasons lying beyond the device.

In order to execute the rights arising from this Warranty, the user is obliged, at his own cost and risk, deliver the device to the Guarantor along with a correctly filled-in warranty card (containing in particular the sale date, the seller's signature and a description of the defect) and sales proof (receipt, VAT invoice, etc.). The Warranty Card is the only basis for repair free of charge. The complaint repair time is 14 days.

When the Warranty Card is lost or damaged, the manufacturer does not issue a duplicate.

.....
seller's stamp

.....
date of sale

Safety

Before using the device for the first time the user should read the following regulations carefully. Not obeying the rules included in this manual may lead to personal injuries or controller damage. The user's manual should be stored in a safe place for further reference. In order to avoid accidents and errors it should be ensured that every person using the device has familiarized themselves with the principle of operation as well as security functions of the controller. If the device is to be sold or put in a different place, make sure that the user's manual is there with the device so that any potential user has access to essential information about the device.

The manufacturer does not accept responsibility for any injuries or damage resulting from negligence; therefore, users are obliged to take the necessary safety measures listed in this manual to protect their lives and property.



WARNING

- High voltage! Make sure the regulator is disconnected from the mains before performing any activities involving the power supply (plugging cables, installing the device etc.)
- The device should be installed by a qualified electrician.
- Before starting the controller, the user should measure earthing resistance of the electric motors as well as the insulation resistance of the cables.
- The regulator should not be operated by children.



WARNING

- The device may be damaged if struck by a lightning. Make sure the plug is disconnected from the power supply during storm.
- Any use other than specified by the manufacturer is forbidden.
- Before and during the heating season, the controller should be checked for condition of its cables. The user should also check if the controller is properly mounted and clean it if dusty or dirty.

Description

EU-R-8b room regulator is intended for cooperation with L-8 external controller.

EU-R-8b room regulators are installed in the heating zones. Temperature information sent by them to the external controller is used to control the thermostatic valves (by opening them when the room temperature is too low and closing them when the pre-set room temperature has been reached).

Current temperature is displayed in the main screen. The user may also change the pre-set temperature permanently or for a limited period of time directly from the sensor.

Controller equipment:

- built-in temperature sensor
- wall-mountable cover

Battery low

In case of low battery, the „Lo” message will appear on the screen. To ensure correct operation of the regulator please change the batteries (2xAAA 1,5V)

How to register the room regulator in a particular zone


Each room regulator should be registered in a zone. In order to register, go to the L-8 menu and select Sensor in the submenu of a given zone (Zone/Registration/Sensor). After selecting the Register icon, press the communication button on the back of the room regulator.

If the registration process has been completed successfully, L-8 screen displays an appropriate message whereas the room sensor screen displays "Scs". If the room sensor displays "Err", an error has occurred during the registration process.



NOTE

Only one room regulator may be assigned to each zone.

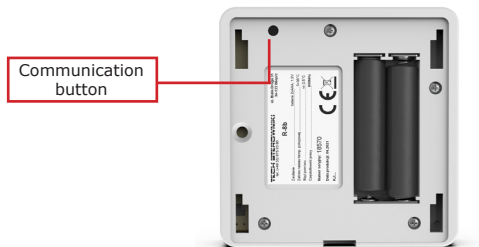

How to change the pre-set temperature

The pre-set zone temperature may be adjusted directly from EU-R-8b room sensor using PLUS and MINUS buttons.

During controller inactivity, the main screen displays current zone temperature. After pressing PLUS or MINUS, the current temperature is replaced with the pre-set temperature (the digits are flashing). Using PLUS and MINUS the user may adjust the pre-set temperature value. After setting desired value wait for 3 seconds – after this time the display shows a panel to define how long the new setting should apply.

Time settings may be adjusted:

- permanently – press PLUS button until Con appears on the screen (the pre-set value will apply all the time regardless of schedule settings),
- for a specified number of hours – press PLUS or MINUS until the desired number of hours appears on the screen e.g. 01h (the pre-set value will apply for a specified period of time; after that the weekly schedule will apply).
- if the temperature value defined in the weekly schedule settings should apply, press MINUS until the screen displays OFF.

EU Declaration of conformity

Hereby, we declare under our sole responsibility that **EU-R-8b** manufactured by TECH STEROWNIKI II Sp. z o.o., head-quartered in Wieprz Biała Droga 31, 34-122 Wieprz, is compliant with Directive 2014/53/EU of the European parliament and of the Council of 16 April 2014 on the harmonisation of the laws of the Member States relating to the making available on the market of radio equipment, Directive 2009/125/EC establishing a framework for the setting of ecodesign requirements for energy-related products as well as the regulation by the MINISTRY OF ENTREPRENEURSHIP AND TECHNOLOGY of 24 June 2019 amending the regulation concerning the essential requirements as regards the restriction of the use of certain hazardous substances in electrical and electronic equipment, implementing provisions of Directive (EU) 2017/2102 of the European Parliament and of the Council of 15 November 2017 amending Directive 2011/65/EU on the restriction of the use of certain hazardous substances in electrical and electronic equipment (OJ L 305, 21.11.2017, p. 8).

For compliance assessment, harmonized standards were used:

- PN-EN IEC 60730-2-9 :2019-06 art. 3.1a Safety of use
- PN-EN 62479:2011 art. 3.1 a Safety of use
- ETSI EN 301 489-1 V2.2.3 (2019-11) art.3.1b Electromagnetic compatibility
- ETSI EN 301 489-3 V2.1.1:2019-03 art.3.1 b Electromagnetic compatibility
- ETSI EN 300 220-2 V3.2.1 (2018-06) art.3.2 Effective and coherent use of radio spectrum
- ETSI EN 300 220-1 V3.1.1 (2017-02) art.3.2 Effective and coherent use of radio spectrum
- EN IEC 63000:2018 RoHS


Wieprz, 11.02.2021

Paweł Jura

Janusz Master

Prezesa firmy

How to use the controller

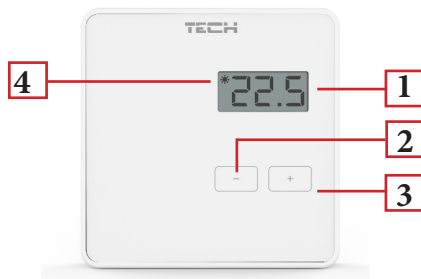

1. Display – current zone temperature.

2. MINUS button

3. PLUS button

4. Icon

- **flashing** - the set temperature has not been reached
- **highlighted** - the set temperature has been reached

The following rules must be kept in mind:

- once registered, the regulator cannot be unregistered, but only switched off in the submenu of a given zone,
- if the user attempts to assign a sensor to the zone to which other sensor has already been assigned, the first sensor becomes unregistered and it is replaced by the second one.
- if the user attempts to assign a sensor which has already been assigned to a different zone, the sensor is unregistered from the first zone and registered in the new one.

It is possible to set individual pre-set temperature value and weekly schedule for each room regulator assigned to a given zone. The settings may be configured both in the main menu of L-8 external controller (Main menu/Sensors) and via www.emodul.eu (using EU-505 or WiFi RS). The pre-set temperature may also be adjusted directly from the room sensor using PLUS and MINUS button.

Description of the functions available in the menu

In order to enter the menu, press and hold PLUS and MINUS buttons. Use PLUS and MINUS buttons to navigate among menu functions.

1.Bat - this function enables the user to check the battery level (%). After Bat function has been selected, the screen flashes for 3 seconds and displays the battery level.

2.Cal - This function enables the user to view sensor calibration. After Cal function has been selected, the screen flashes for 3 seconds and displays the calibration value.

3.Loc - This function enables the user to activate button lock. After Loc function has been selected, the screen flashes for 3 seconds and you are asked if you want to activate the lock (yes/no). Confirm using PLUS or MINUS button. In order to confirm your choice, wait 3 seconds. Once the lock has been activated, the buttons are locked automatically after 10 seconds of inactivity. In order to unlock, press and hold PLUS and MINUS at the same time. When Ulc appears on the screen, the buttons have been unlocked.

4.Def - This function enables the user to restore factory settings. Once Def function has been selected, the screen flashes for 3 seconds and you are asked if you want to restore factory settings (yes/no). Select using PLUS or MINUS. Wait 3 seconds to confirm your choice.

5.Ret - exit the menu. Once Ret has been selected, the screen flashes for 3 seconds and returns from the menu to the main screen view.

Technical data

Range of room temperature settings.....5-35°C
Power supplybatteries 2xAAA 1,5
Accuracy of measurement.....+/-0,5°C
Frequency.....868MHz



We are committed to protecting the environment. Manufacturing electronic devices imposes an obligation of providing for environmentally safe disposal of used electronic components and devices. Hence, we have been entered into a register kept by the Inspection For Environmental Protection. The crossed-out bin symbol on a product means that the product may not be disposed of to household waste containers. Recycling of wastes helps to protect the environment. The user is obliged to transfer their used equipment to a collection point where all electric and electronic components will be recycled.